

Specific Instructions for Connecting a Camcorder, VCR, or Laser Disc:

For simplicity, we will refer to the specific device as a camcorder.

1. Connect the Video on the Camcorder to the Video 1 connector on the PCTV cable harness.
2. Connect the Audio on the Camcorder to the Audio 1 connector on the PCTV cable harness.
3. Connect the Speaker Phone Jack on the PCTV to a speaker or use a shielded Y adapter cord to connect to the Tandy Sensation.

3-Ft 42-2475

6-Ft 42-2481

**NOTE:** If the device used has stereo capability, Audio 2L and Audio 2R should be used.

